

#3942: Start Mode for VDDS

How the VDDS modules call each other can be set in the configuration. This setting is saved in the VDDS_mmi.ini.

```
[ii_OnyxCeph3_PVS]  
StartModulMode=0
```

StartModulMode

- **Normal:** HFWinExec
- **RunAs:** Process tools via parameter "runas"
- **Shell:** Run via ShellExecute

☒ Adoption of Master Data by VDDS-Media

☒ Adopt Master Data

☐ Adopt Master Data from:

Image Information Provided for VDDS-Media

☐ Slides with Tracing, Image Size 200 Pixels Side Length

☐ Original Images

☐ 3D Image Types (Show Information Only)

Hand over Information to:

Hand over Documents to:

Hand over Analysis Results to:

Practice Number Program Start:

normal
RunAs
Shell

From:

<https://onyxwiki.net/> - [OnyxCeph³™ Wiki]

Permanent link:

<https://onyxwiki.net/doku.php?id=en:3942>

Last update: **2022/04/02 08:11**

