


# Enabeling IP Port 16300 on the Server Computer

The standard IP port which is used for OnyxCeph<sup>3</sup>™ client server communication is IP port 16300. This should be enabled inbound and outbound on the server via Windows™ control panel.

If another communication port was defined in the OnyxCeph<sup>3</sup>™ [database server settings](#) the alternative port should be enabled.


## Control Panel

In the Windows™ control panel, open topic [Advanced settings] in category [Windows defender Firewall]

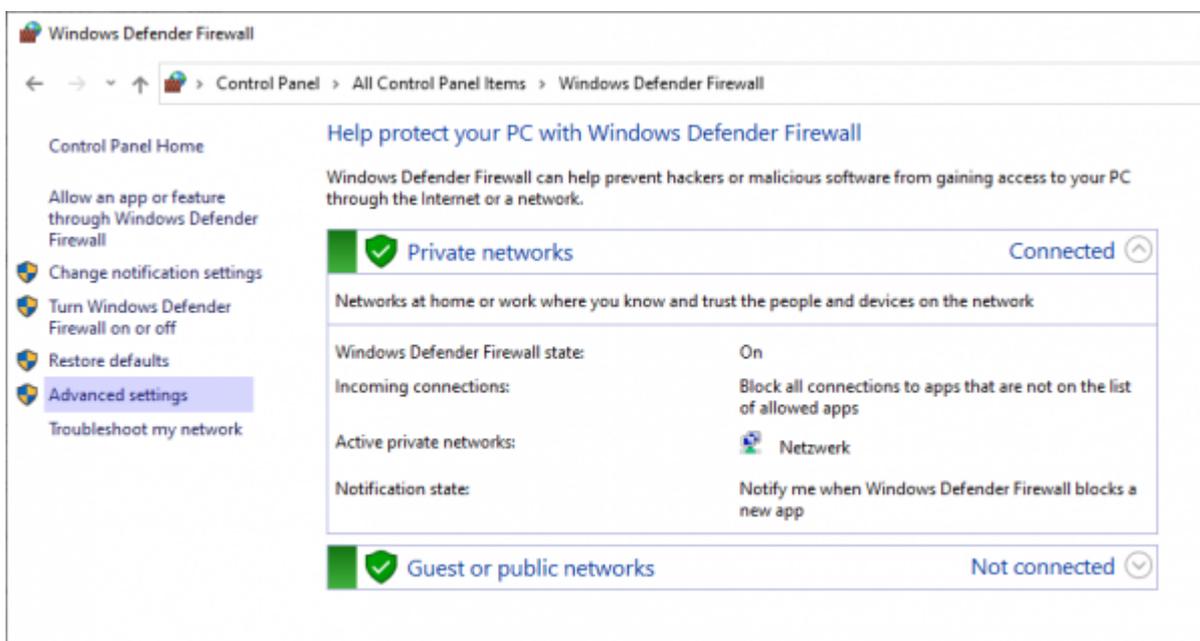

## Inbound Rules


Select [Inbound Rules] and click [New Rule] on the right side

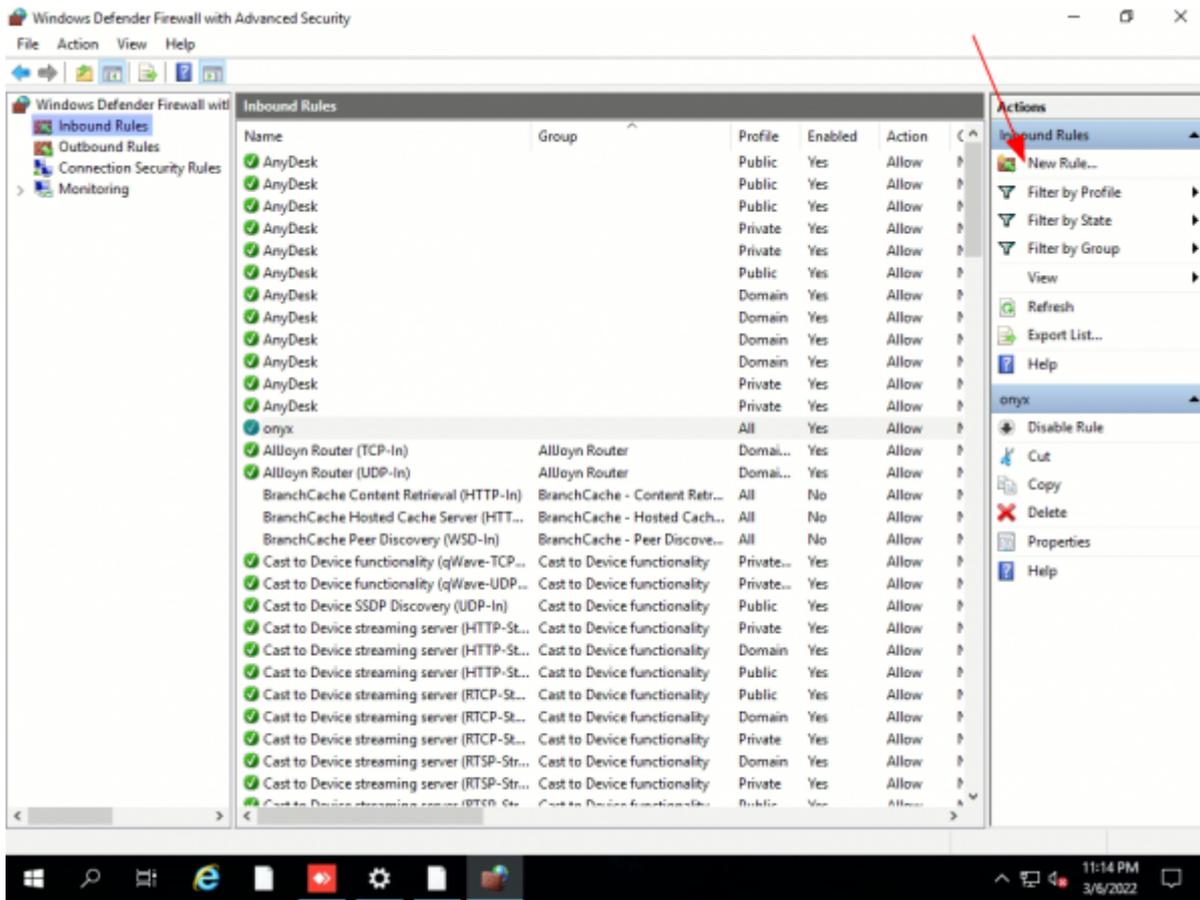

See also: [Port sharing](#)

## Outbound Rules

Select [Outbound Rules] and click [New Rule] on the right side

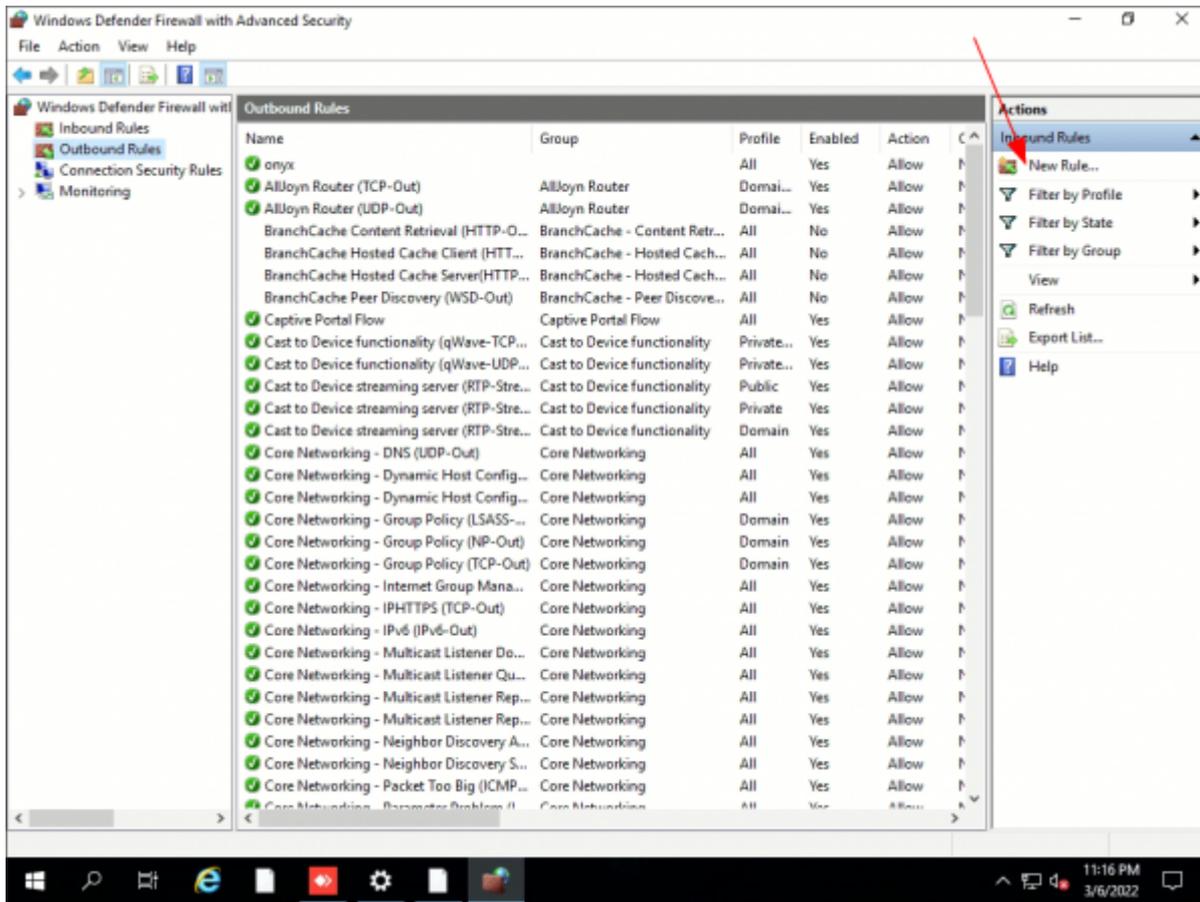

See also: [Port sharing](#)

From: <https://onyxwiki.net/> - [OnyxCeph<sup>3</sup>™ Wiki]

Permanent link: [https://onyxwiki.net/doku.php?id=en:share\\_ip](https://onyxwiki.net/doku.php?id=en:share_ip)

Last update: 2022/03/08 10:07

